

3.Master slave machine set

2 or more than 2 the same lamp connected with the 3 core signal line,with any one host for the demo program or gradient, jump, other lighting set to receive the address SLAu.

4. Technical parameters

Power 1, AC100V-260V/50HZ/60HZ.

Power 2, DC24V/200W.

The light source, 180W LED.

Channel, 10 DMX512 control channels.

Voice control, built-in procedures, master-slave control.

Stroboscopic effect, process color selection, color transform.

256 high brightness level, 0-100% linear dimming, camera video real no flicker, color more gorgeous rich.



 
PAR Instructions




Please read the instructions carefully before using the product

10CH RGBWYI PAR Instructions

1. Displaypanel



Boot into the main menu press MANU, press UP or DOWN to select the sub menu, press ENTER to determine.

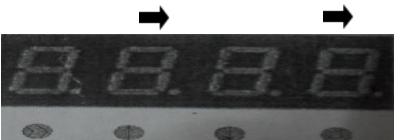

A001		A512		10channel mode, UP/DOWN key selects the address code (A001 ~ A512), press ENTER to save the address code
d001	➡	F512	➡	6channel mode, UP/DOWN key selects the address code (d001 ~ d512), press ENTER to save the address code
FF00	➡	FF99	➡	In the gradient mode, the UP/DOWN key selects the running speed (ff00-ff99) and presses ENTER to save the current running speed.
EE00	➡	EE99	➡	The pulse variant mode, UP/DOWN key selects the running speed (ee00-ee99), press ENTER to save the current running speed.
CC00	➡	CC99	➡	Jump mode, UP/DOWN key select running speed (cc00-cc99), press ENTER to save the current running speed.
Soud		Soud		Voice control mode
R255	➡	R001	➡	Manual red adjustment, the UP/DOWN key is used to adjust the brightness between r000-r255 without the control console
G255	➡	G001	➡	Manual green adjustment, use UP/DOWN key to adjust brightness between g000-g255 without control
B255	➡	B001	➡	Manual blue adjustment, use UP/DOWN key to adjust the brightness between b00-b255 without control
W255	➡	W001	➡	Manual white adjustment, use UP/DOWN key to adjust the brightness between w00-w255 without control
Y255	➡	Y001	➡	Manual yellow adjustment, use UP/DOWN key to adjust the brightness between y000-y255 without the console
I255	➡	I001	➡	Manual purple adjustment, use UP/DOWN key to adjust the brightness between i000-i255 without the console

2. Channel table

6Channel	The value of the channel	Function description
CH1	0	Red off
	1-255	From dark to light open
CH2	0	Green off
	1-255	From dark to light open
CH3	0	Blue off off
	1-255	From dark to light open
CH4	0	White off
	0-255	From dark to light open
CH5	0	Yellow off
	0-255	From dark to light open
CH6	0	purple off
	1-255	From dark to light open

10Channe l	The value of the channel	Function description
CH1	0-255	The total dimming
CH2	0-255	Stroboscopic from slow to fast
CH3	0-50	Open CH1-CH6
	51-100	The program selected color
	101-150	Program change
	151-200	The program pulse variable
	201-250	The program jumps
	251-255	Soud open
CH4	0-255	The speed from slow to fast
CH5	0	Red off
	1-255	From dark to light open
CH6	0	Green off
	1-255	From dark to light open
CH7	0	Blue off off
	1-255	From dark to light open
CH8	0	White off
	1-255	From dark to light open
CH9	0	Yellow off
	1-255	From dark to light open
CH10	0	purple off
	1-255	From dark to light open